

[How to start NVR Enterprise \(x64\) trial?](#)

[What are the differences between 32-bit editions and 64-bit editions](#)

[Memory limit](#)

[64-bit system limit extension](#)

[64-bit removed legacy camera drivers](#)

[64-bit removed features](#)

[Does the Enterprise Edition share the same feature as Commercial Edition?](#)

[Does the Enterprise Edition require a different kind of license?](#)

[New License Type Explained](#)

[Does Enterprise Edition runs on 32-bit Windows?](#)

[Can I upgrade a 32-bit NVR server to Enterprise Edition?](#)

[Can I downgrade an Enterprise Edition server to 32-bit Commercial Edition NVR?](#)


## How to start NVR Enterprise (x64) trial?

As explained [here](#), NVR Enterprise Edition requires a new license type, in addition to existing Commercial license (Professional/Intelligent/Panoramic).

To start Enterprise trial, you will use the following trial code upon software installation:

**Enterprise Edition trial key: DVL9Q-QGFCG-AW51T**

Upon installation, you will be prompted for such code, illustrated by the following screenshot:

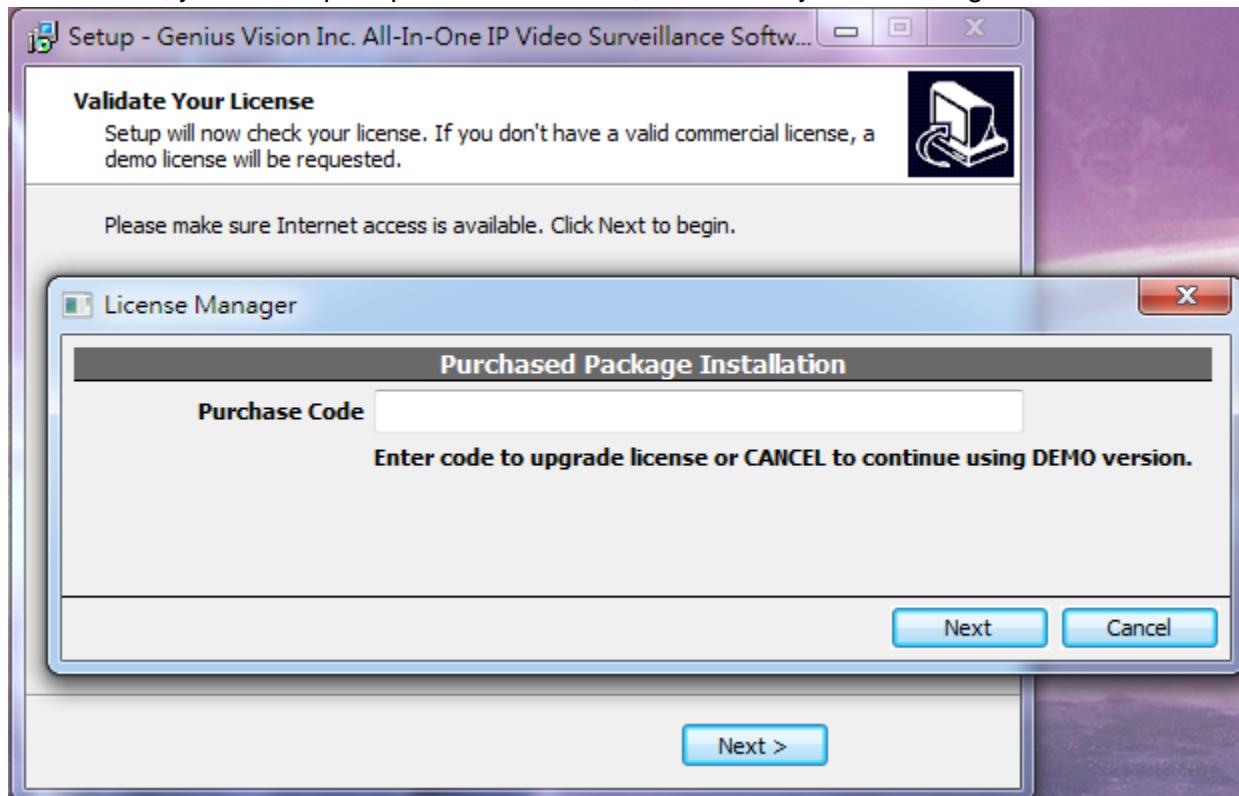

In the future, if you need to upgrade trial to formal installation, simply reinstall the software and re-enter the formal code again.

## What are the differences between 32-bit editions and 64-bit editions

### Memory limit

Due to the OS nature, 32-bit application are limited to 4GB memory, while 64-bit applications does not have such limit.

### 64-bit system limit extension

Due to the fact that x64-based system comes with more available system resource (if configured properly), x64 build of NVR software has extended several system limits and/or default values, as illustrated below:

	32 bit	64 bit
Maximum allowed TCPConnections (Image 1)	1,000	2,000
Default TCPConnections	150	1,000
Storage MaxSize_GB per directory (Image 2)	20,000	80,000
Default MaxSize_GB per directory	1,000	1,000
Maximum number of monitors supported (Image 3)	6	8
Maximum number of matrix view	256 (16x16)	400 (20x20)

### 64-bit removed legacy camera drivers

64-bit drivers needs 64-bit camera SDK/drivers to work. Some vendors do not provide 64-bit SDK/driver therefore aren't supported in 64-bit editions. They are:

- ACTi
- ArecontVision
- EtroVision
- VIVOTEK

### 64-bit removed features

Some features require components that does not have 64-bit counterpart, therefore is removed from 64-bit editions. They are:

- 3GStreaming (You should use the newly developed [Mobile APP](#) instead)

### Does the Enterprise Edition share the same feature as Commercial Edition?

Except for the [Known difference](#), Enterprise Edition shares almost all features with Commercial Edition.

However, as the [64-bit Introduction](#) suggested, 64-bit applications are ported from 32-bit and they are of entirely different application. They might be minor behavior differences that are yet to be tested & verified.

## **Does the Enterprise Edition require a different kind of license?**

Enterprise Edition are compatible with Commercial Edition license (Professional/Intelligent/Panoramic), but it requires an additional per-server license, called Enterprise License (codenamed **copye**).

### **New License Type Explained**

- **New license type:** **copye** is a new license type that will be available for purchase. License fee will be defined somewhere else.
- **License applicability & installation:** For Enterprise Edition, one server (PC) requires exactly one unit of **copye** to function correctly, otherwise "Protection lock error" will be encountered and the software won't start. This special license code will be asked at installation time (see **Image 4**).
- **Trial & production mode:** In demo mode, **copye** comes with 8-channel of trial license with IVS and panorama features enabled to facilitate trial purpose. In product mode (non-trial), **copye** does not bring additional per-camera license. Therefore additional per camera license (such as **pro**, **ipr**, **pano**) must be purchased and installed separately.

## **Does Enterprise Edition runs on 32-bit Windows?**

No.

You need a 64-bit Windows operating system in order to run Enterprise Edition.

## **Can I upgrade a 32-bit NVR server to Enterprise Edition?**

Yes.

You can do so just by installing 64-bit Enterprise over an existing 32-bit NVR server (and of course you need a 64-bit Windows operating system).

All configuration will be kept, but you'll need an additional **copye** license, as stated [here](#).

## **Can I downgrade an Enterprise Edition server to 32-bit Commercial Edition NVR?**

Yes.

You can do so just by installing 32-bit NVR over an existing 64-bit Enterprise NVR server.

All configuration will be kept.



