

[NH267 Series OS Support List and Driver Download](#)
[Driver Installation Steps](#)


NH267 Series OS Support List and Driver Download

OS name	Testing	Driver
Windows XP 32-bit	Not tested	32-bit Windows Driver
Windows Vista 32-bit	Not tested	32-bit Windows Driver
Windows 7 32-bit	Tested	32-bit Windows Driver
Windows 8 32-bit	Only preliminarily tested	32-bit Windows Driver
Windows 2003 Server 32-bit	Not tested	32-bit Windows Driver
Windows 2008 Server 32-bit	Not tested	32-bit Windows Driver
Windows XP 64-bit	Not tested	64-bit Windows Driver
Windows Vista 64-bit	Not tested	64-bit Windows Driver
Windows 7 64-bit	Not tested	64-bit Windows Driver
Windows 8 64-bit	Only preliminarily tested	64-bit Windows Driver
Windows 2003 Server 64-bit	Not tested	64-bit Windows Driver
Windows 2008 Server 64-bit	Not tested	64-bit Windows Driver


Driver Installation Steps

Please obtain driver according to the above table and unzip the file into your computer.

Open Windows “Device Manager” and locate “**Multimedia Video Controller**” inside “**Other devices**”. If it’s 16-channel capture card, you will have **two** such devices. Right click to invoke context menu and select “**Update Driver Software...**”.

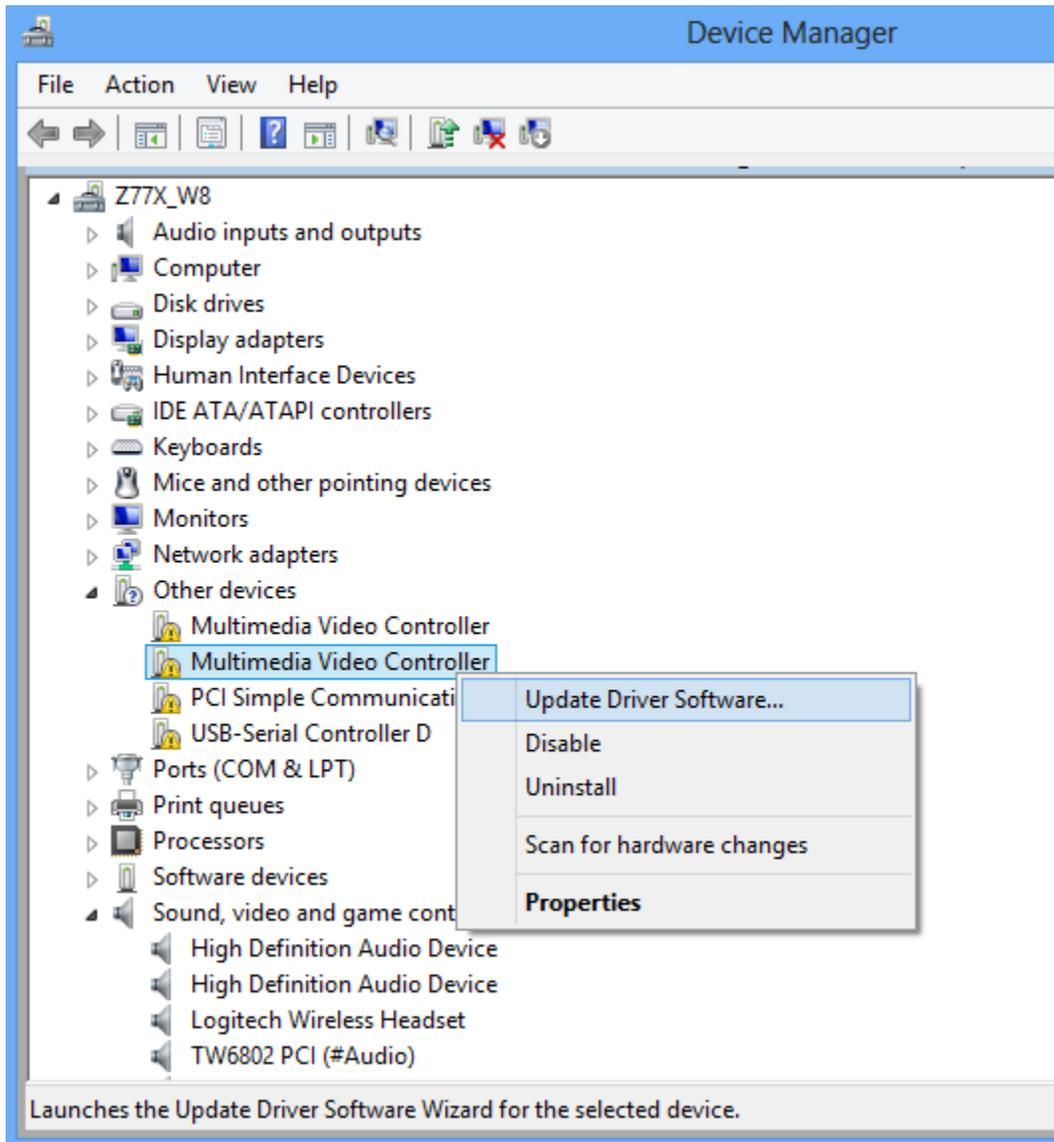


Select "browser for driver..."

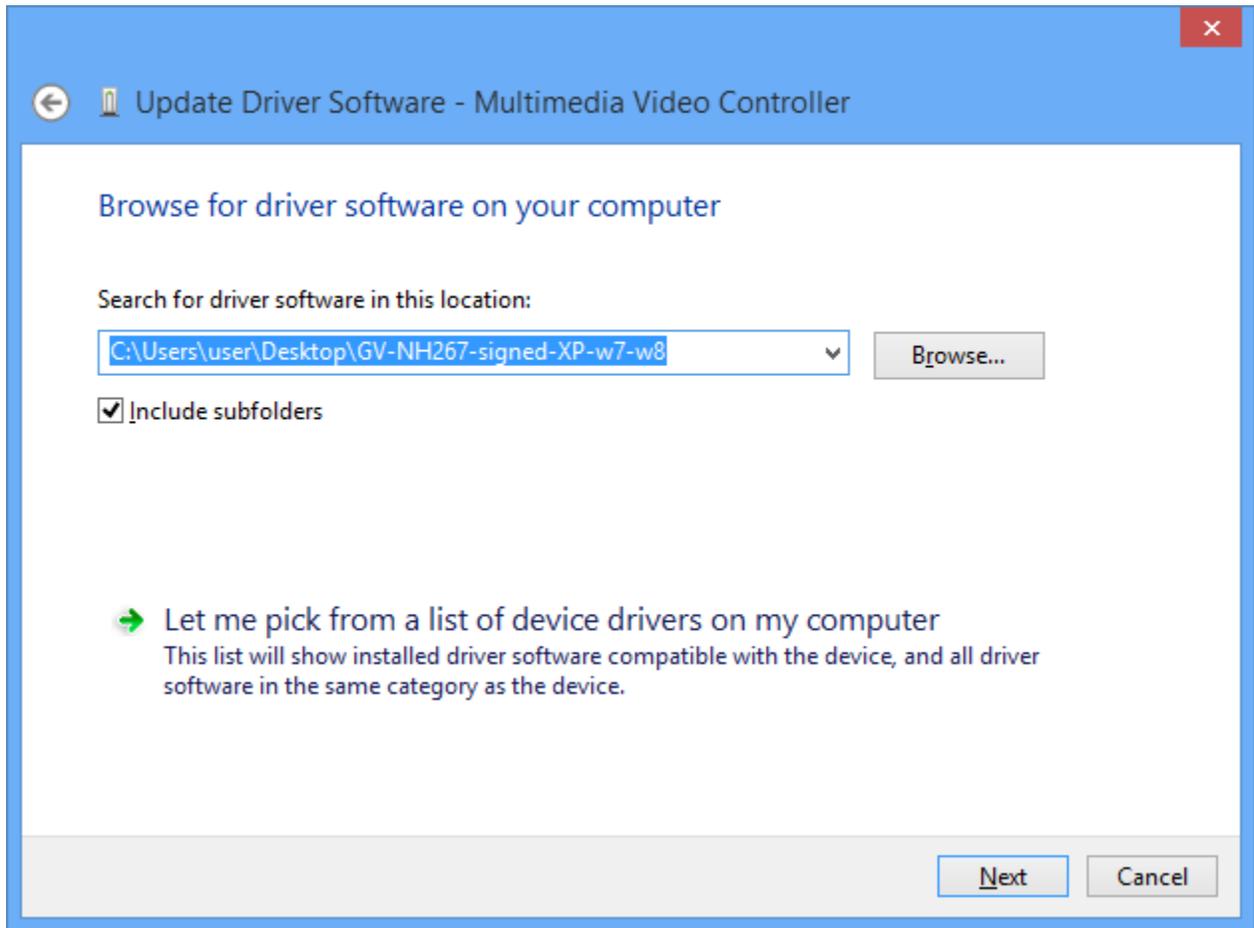

Following security notice might appear, select **“Install”**.



For 16-channel capture card, you need to update driver for both devices. When you see the following message, it means the process is completed. The device might not be usable right away and you need to reboot.

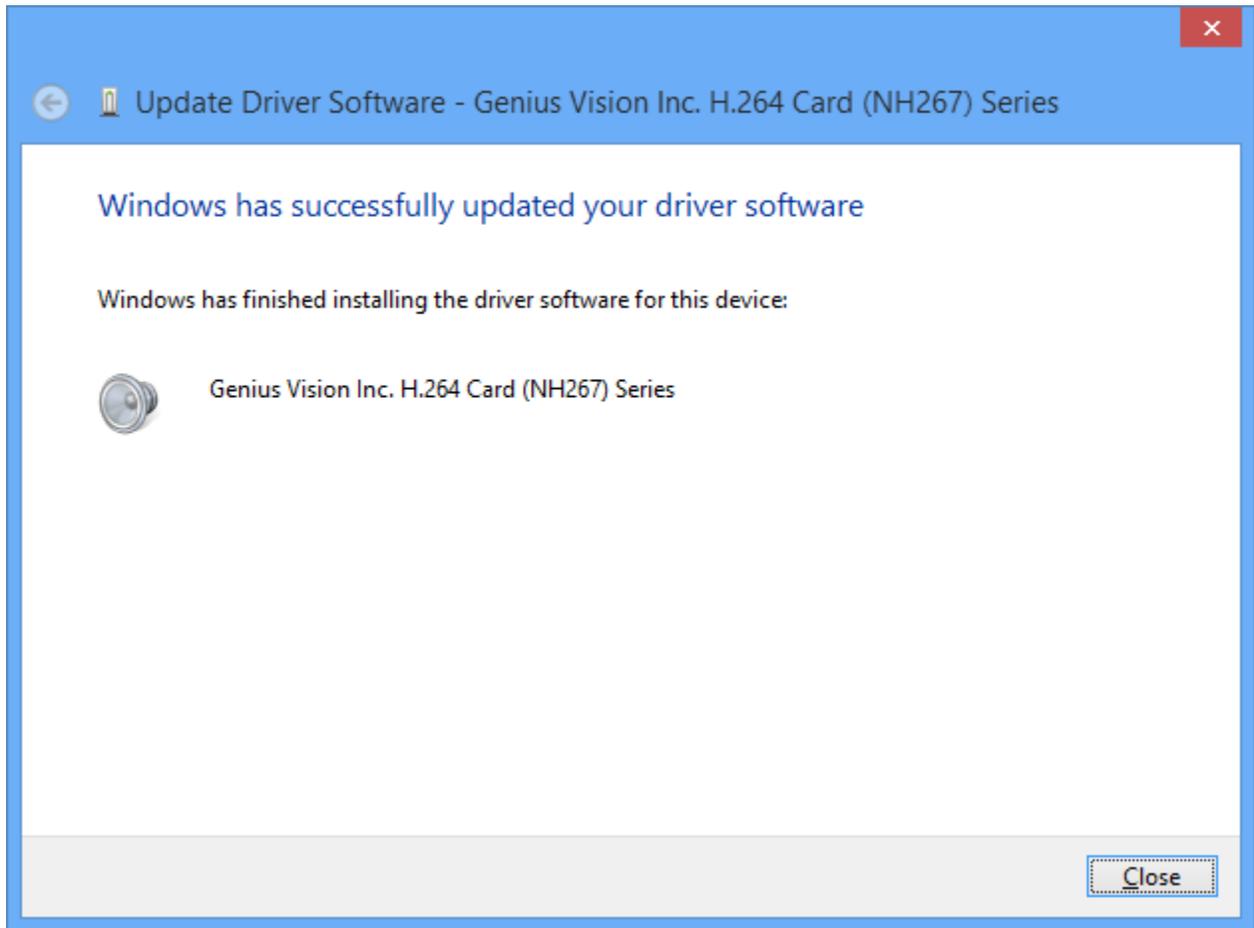

After rebooting, open Device Manager to examine if both devices are installed properly:

